



Original Connections

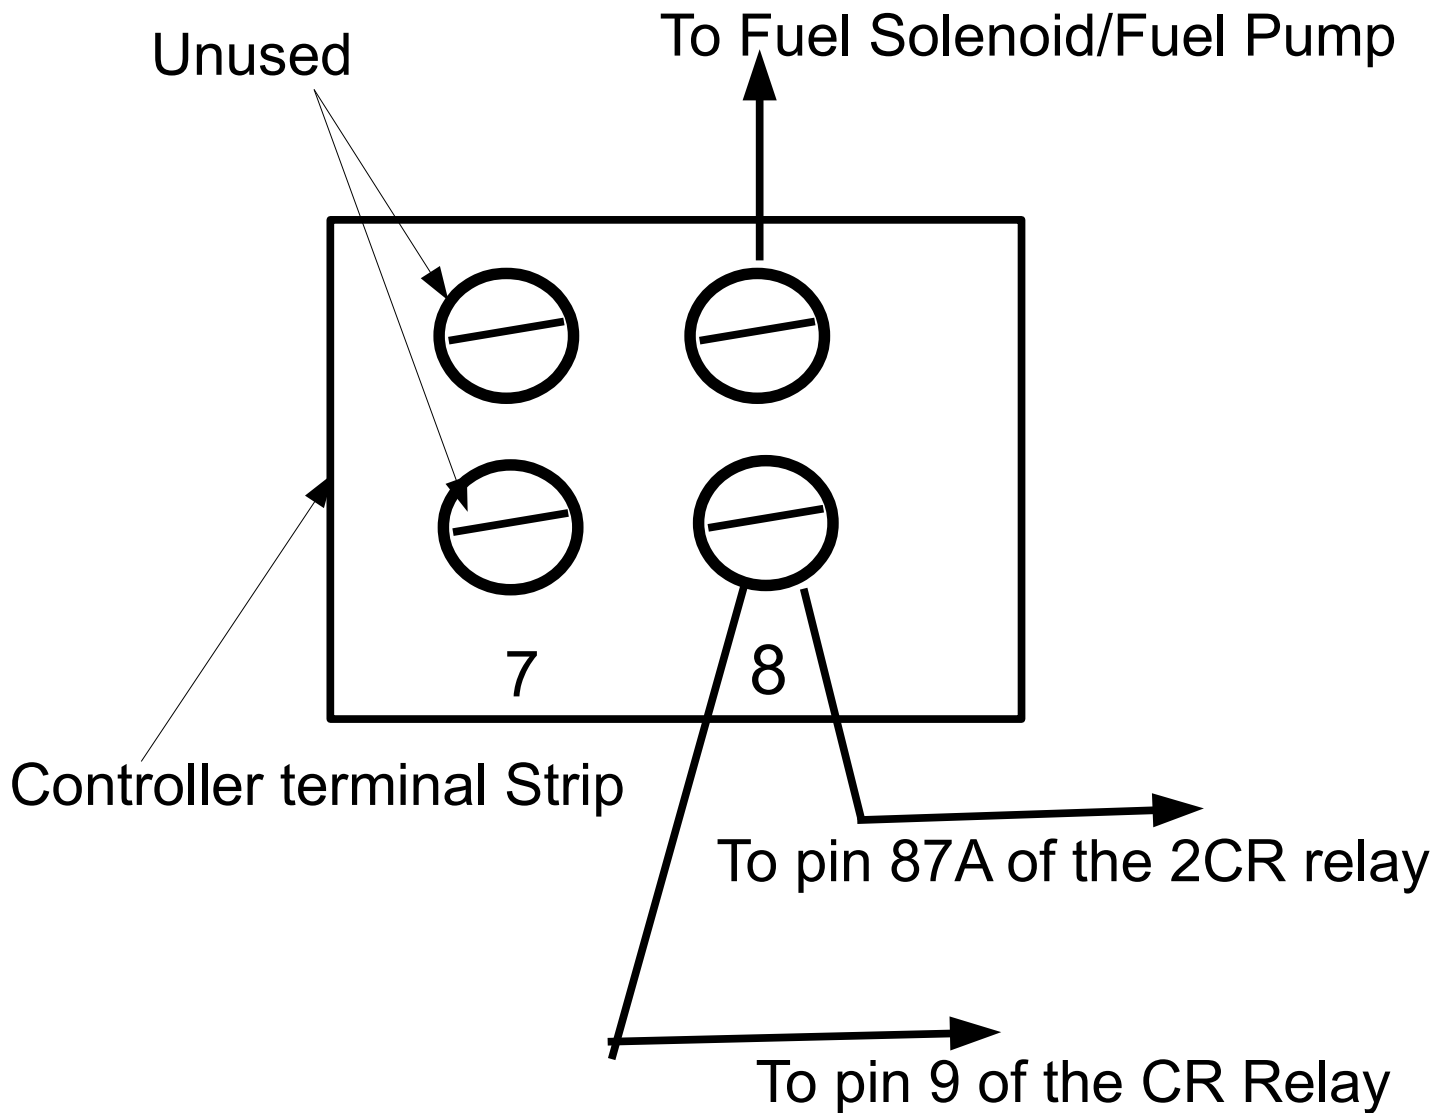

New Time Delay Relay

Hella 996152131

To fuel solenoid

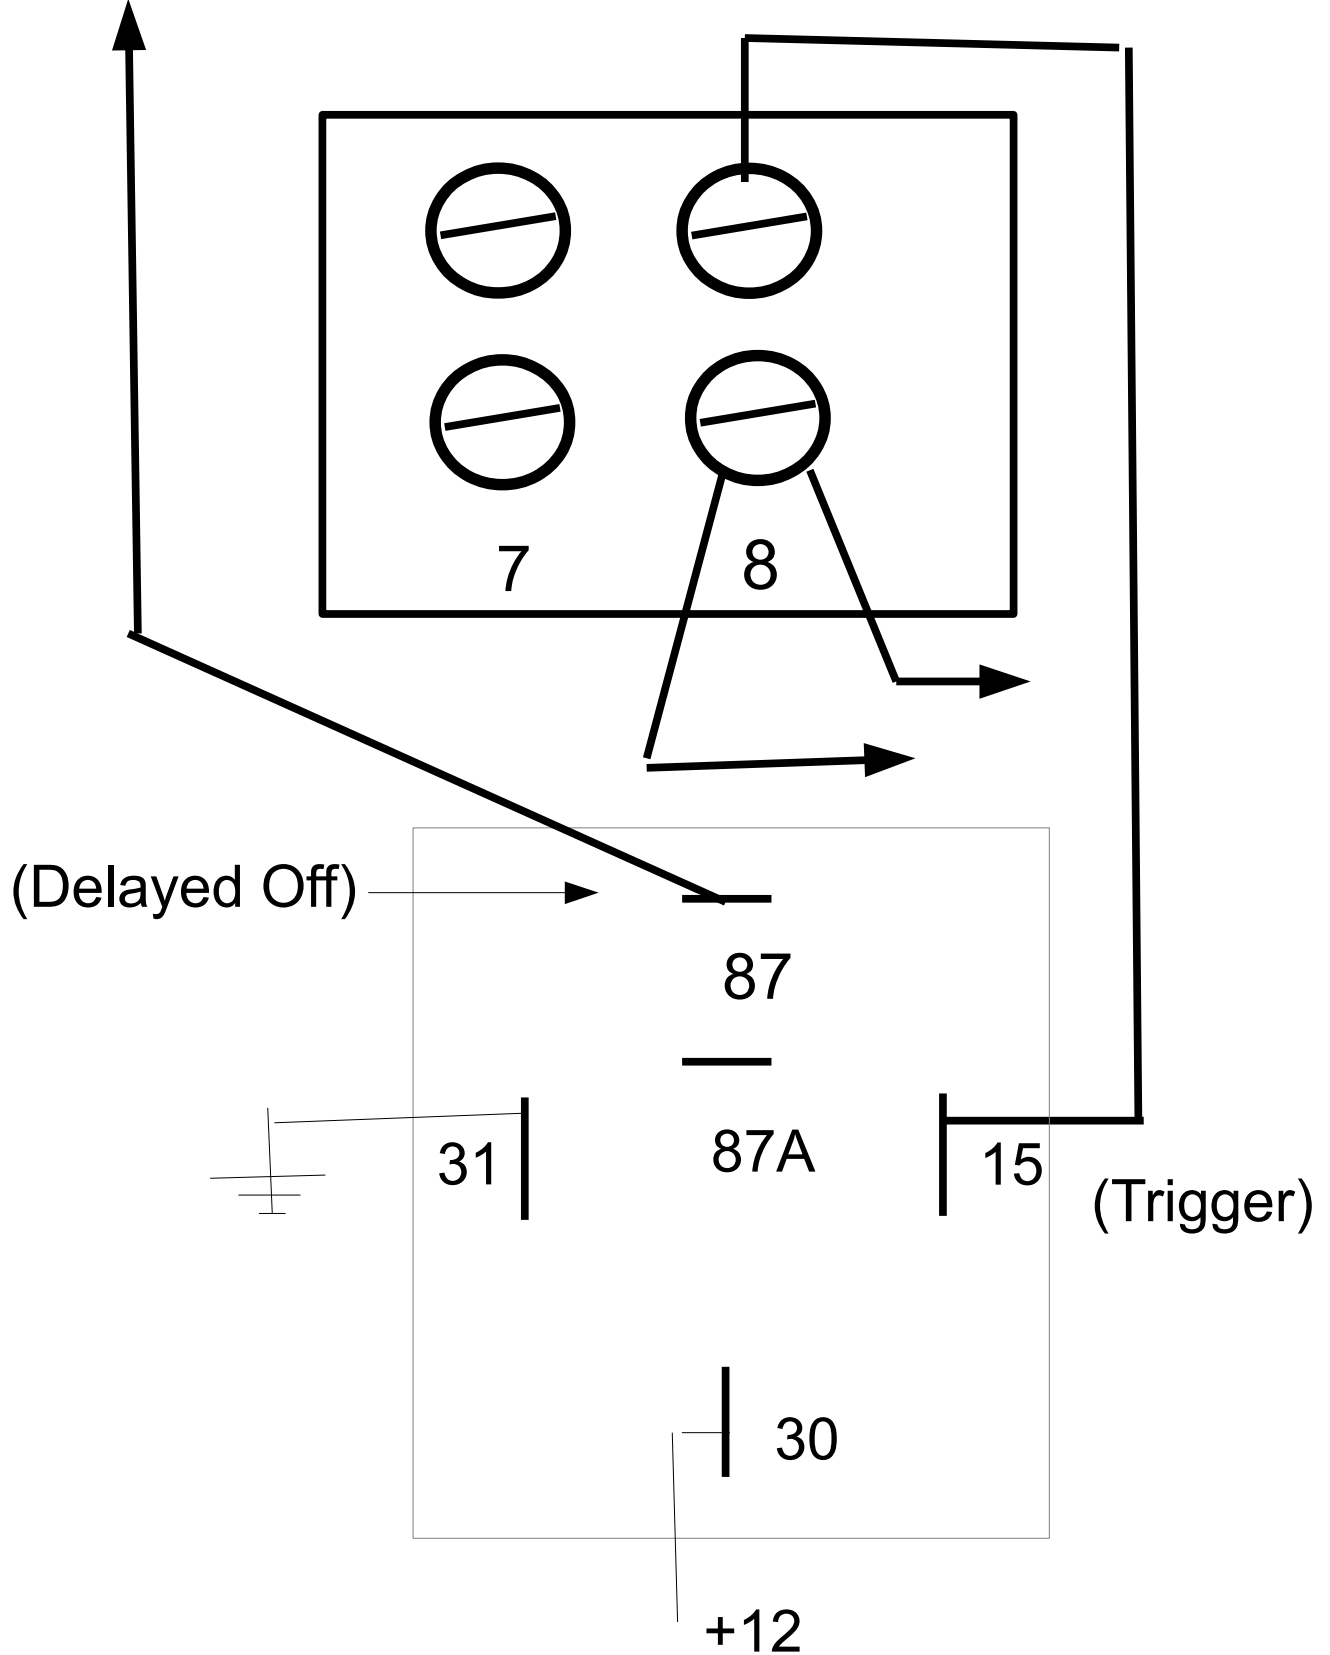

Adding a time delay relay

The fuel solenoid/fuel pump power comes from
The pin 8 pair on the controller terminal strip.
The pin 7 pair is Unused.

1. Remove the wire on the upper pin 8 connection and connect it to pin 87 of the new time Delay Relay. (delayed off output)

2. Connect upper pin 8 connection to pin 15 of New time delay relay (Trigger)

4. Connect pin 31 of the new time delay relay to Ground.

5. Connect pin 30 of the new time delay relay to +12 volts (Pin P of the controller terminal strip)